



## Installation Requirements – Please Read Before Installing Your Sovereign Machine

### SOVEREIGN GLASSWASHER Installation Details

#### Siting

The machine must be sited on a sound level surface, with adequate clearance for servicing. Use the adjustable feet to ensure that the machine is level and that its weight is evenly distributed on each foot.

#### Electrical

The machine is supplied for single phase 240v operation, complete with a mains cable.

A switched spur must be positioned within one metre of the machine and be accessible. This machine **MUST** be earthed. Use of an RCD is recommended.

The 4mm<sup>3</sup> mains cable must be wired directly into a fused double pole isolating switch (with contact separation of at least 3mm in all poles). Fuse @ 25 Amps.

#### Water

A single (hot or cold) water supply is required. A cold water supply is recommended. A hot water supply must not exceed 60°C.

The water supply must terminate with easily accessible ¾" BSP Tap within one metre of the machine.

The machine incorporates a Type 'A' Airgap and can be connected to any water supply.

#### Waste

The machine has a pumped waste system which requires a trapped open-vent up-stand, a minimum of 450mm from the base of the machine. The outlet hose is hooked into the top of the up-stand (100mm max - insertion to avoid siphoning).

#### Chemicals

Fit the chemical weights and filters to the chemical suction tubes (clear and blue) and insert into the external 5 litre detergent and rinse-aid bottles. The clear tube is for detergent. The blue tube is for rinse-aid.

## If You Require Help



#### Owners Manual

Refer to USB stick for more information and advice



#### Service and Sales

Tel: 01933 666244



#### Website & Email

[www.clenaware.co.uk](http://www.clenaware.co.uk)  
[info@clenaware.co.uk](mailto:info@clenaware.co.uk)





**Installation Requirements – Please Study Before Installing Your Sovereign Machine**

**SOVEREIGN GLASSWASHER**  
Installation Diagram

